

---

## JP Heater App

The JP Heater app allows you to remotely control and monitor JP Heater systems, directly from your phone. It supports devices: JP Heater Combi, Air Heater. Easy to use interface, allows quick access to all functions of the app.

Technical requirements: Android 6.0 and above/iOS 11.0 and above. Bluetooth connection to communicate with the device.

How to get the APP:

(1) Android Download link:

[https://drive.google.com/file/d/1HqHzbE6ko\\_Jr-XcMp8sdoNTRbWFvFbc/view?usp=sharing](https://drive.google.com/file/d/1HqHzbE6ko_Jr-XcMp8sdoNTRbWFvFbc/view?usp=sharing)

(2) iPhone: Search MyBluee in the app store.


(3) Contact our sales team +86 10 8081 9579

Mobile phone system environment requirements: Android10 or above, support Bluetooth function, storage space 30M.

Open and close methods of the blue tooth function:

- ① Use the rotary button to choose SETTING/Hammer icon, click the button, and enter the setting interface
- ② Use the rotary button to choose bluet and press OK to enter
- ③ Use the rotary button to choose oN or oFF, press OK to finish the set; press

Return button to cancel the set.

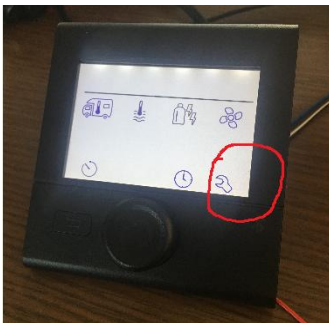

How to operate



Open the APP

Click Bluetooth connection

Choose "207@BLF" , this Bluetooth name is the system default profile name. If you changed the name, please connect the name you changed.

APP interface



The display interface after the controller connected Bluetooth

Room/Air Heating Mode




Click "Room heating" button, turn on air heating


Click "Fuel" to choose fuel source (diesel, OR diesel+ electricity 900W, OR diesel+ electricity 1800W OR electricity 900W OR electricity 1800W )

Click "Fan speed" to choose the fan speed levels

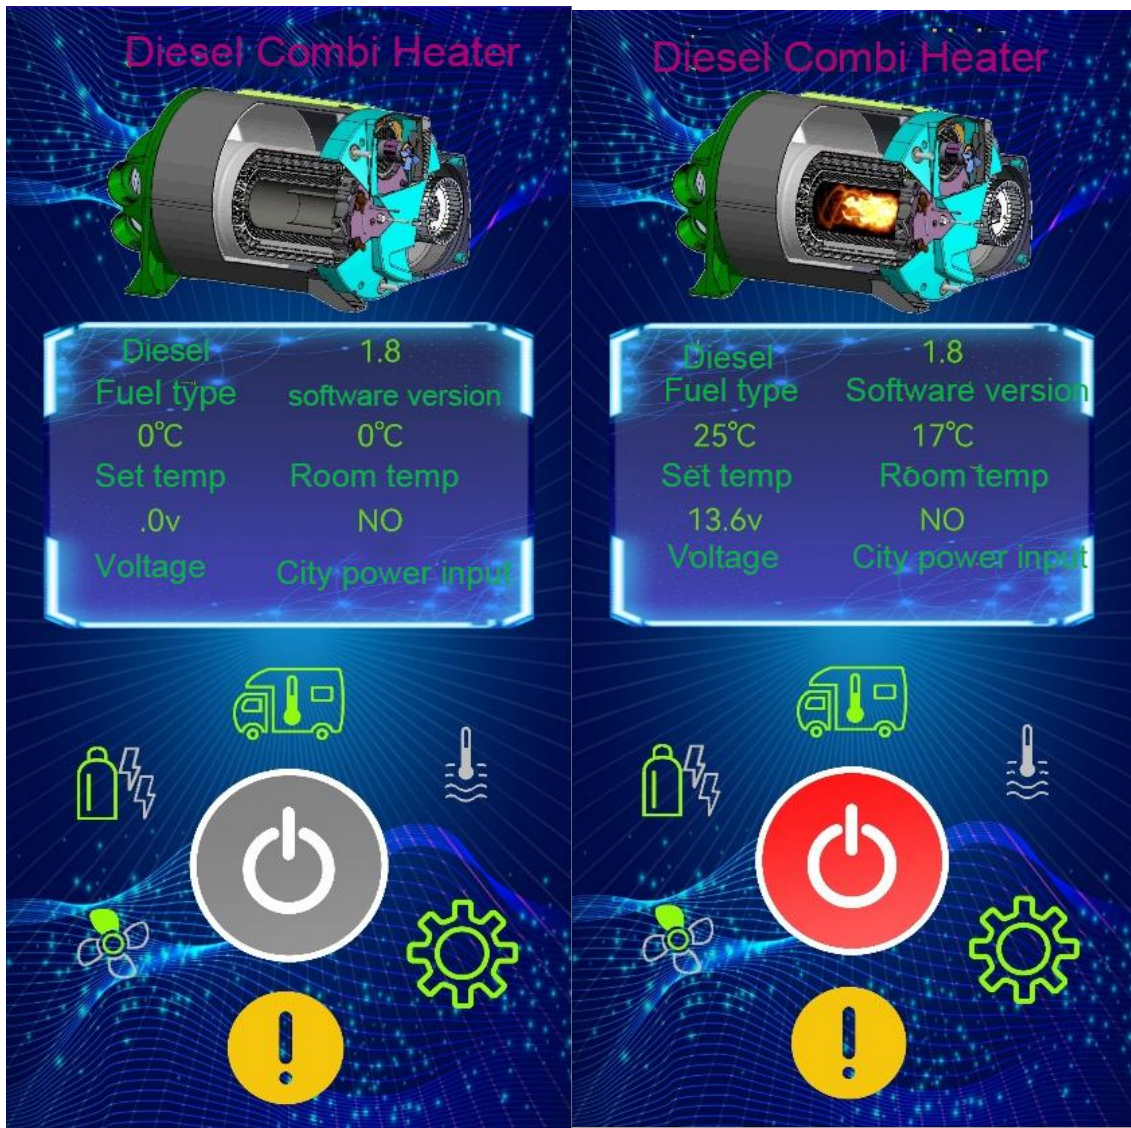


Click "Turn on" button, the heating starts



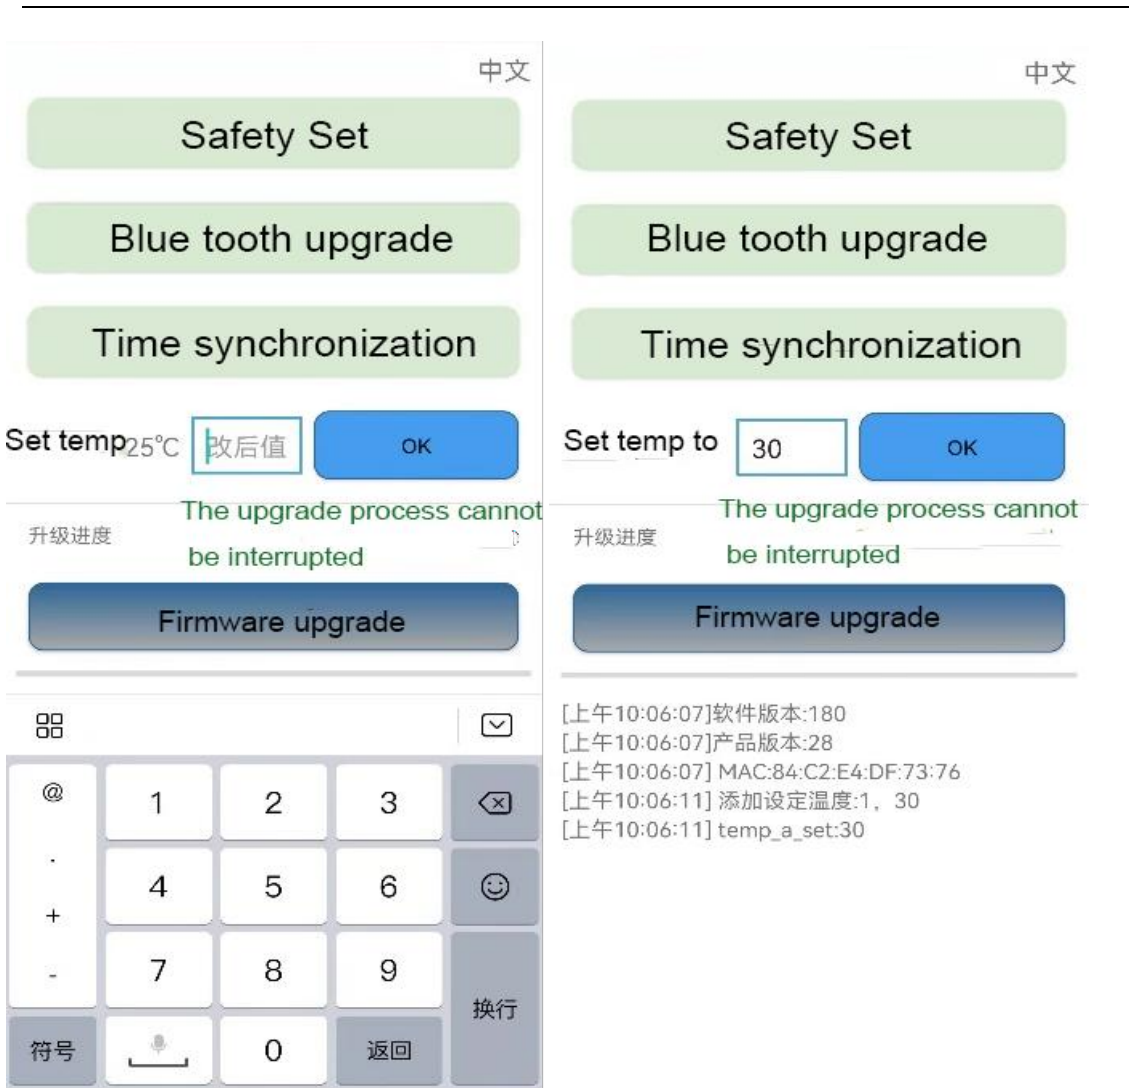




Set the room temperature, enter the number from 5-35 degrees, press OK, the setting is done.



### Water Heating mode

Click  "Water heating" button , turn on water heating function (  40°C OR  60°C )

Click  "Fuel" to set the heating source (  diesel OR  electricity 900W OR  electricity 1800W )





⑧ Click  "Turn On", the heater starts.







Note: For water heating mode only, the fuel source could not be diesel and electricity at the same time.





### Room heating and water heating mode


Click  "Room heating" button, turn on room heating 


Click  "Water heating" button , turn on water heating (  40°C OR  60°C OR  boost )

Click  "Fuel" to choose the fuel source (  diesel OR  diesel +electricity 900W OR  diesel + electricity 1800W OR  electricity 900W OR  electricity 1800W )

Click  "Fan speed" button to choose the fan speed levels


5 Click  "Turn On/Off" the heater starts.

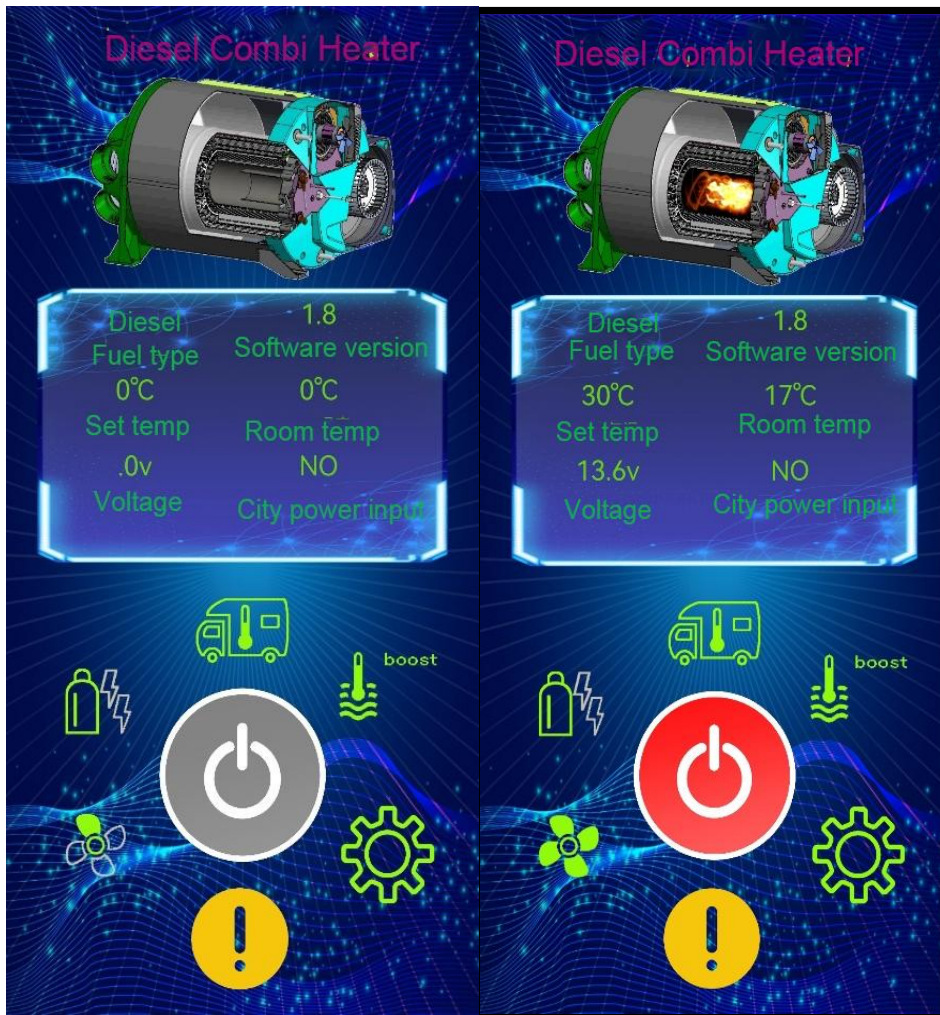

Click  Error code button, enter the error code check and error code eliminate interface, refer below.

```
[11:44:10]读取故障信息
[11:44:12] Rx: 1 8 c 0 0 0 0 0 0 0 0 0 0 0 9 9 b b
目前的故障代码: 0
历史故障代码: 0
历史故障代码: 0
历史故障代码: 0
历史故障代码: 0
历史故障代码: 0
```




System setting, click  "System set" button and enter the setting interface



Change the Bluetooth name, click **Safety set** “Safety set”



Heater name

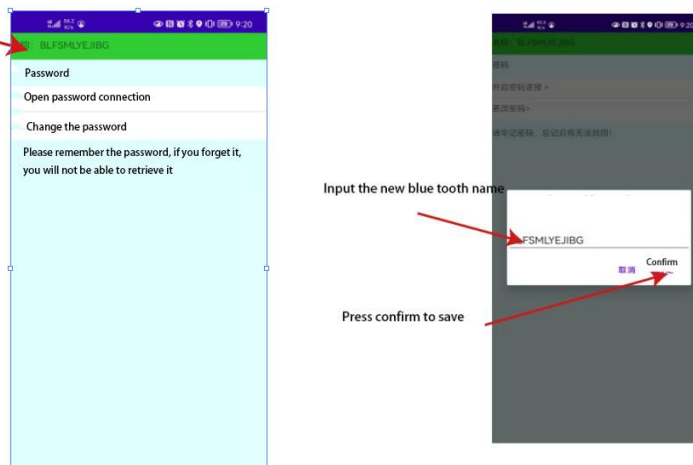



Restart the APP after you change the bluetooth name.

Bluetooth switch upgrade, click **Blue tooth switch update** “Blue tooth switch update” ( Note: Do not upgrade the bluetooth switch if unnecessary )


Time synchronization , click **Time synchronization** “time synchronization” button , the digital controller will update to the time on your phone.

( Note: the blue tooth connection will be disconnected after the time synchronization, you have to re-connect the blue tooth. )

Heater firmware upgrade, click **Firmware upgrade** “Firmware upgrade” button, to do the update of the heater firmware.

Will need to input 6 letters code, refer below:



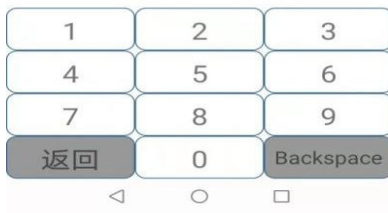

When the upgrade progress reaches 100%, it means the upgrade is complete. As shown below.

