

GR-C006B Seven burner strong flame pull-type gas stove

User manual

* service life reminder: according to the provisions of GB 17905-2008 safety management rules for household gas burning appliances, "the service life of gas cookers shall be 8 years from the date of sale." The company's products implement the standard.

Contents:	1
Model and main technical parameters.....	2
Safety precautions.....	3
Environmental impact statement to users.....	4
Product picture information.....	5
Product explosion diagram.....	6
Packing list.....	7
Installation method.....	8
Instructions for use.....	9
Daily inspection and maintenance.....	10
Common fault identification and treatment.....	11
After sales service	12

1、 Model and main technical parameters

Model GR-C006B Seven burner strong flame pull-type gas stove

Characteristic:

Piezoelectric Ceramic ignition

High quality stainless steel surface drawing

Less space, easy to use

Easy to install

main technical parameters

Air tightness	Gas inlet to the fire hole 1.5 times the rated pressure does not leak out
Ignition performance	Ignition for 10 times and ignition for 8 times, no failure for 2 times and no deflagration
Combustion conditions	Time of flame transmission to all fire holes $\leq 4S$
temperature rise	Combustion noise $\leq 65dB$, flame out noise $\leq 85dB$
	After the burner is ignited, the flame shall be clear, uniform and free of yellow and black smoke
	The position (knob) to be touched by hand during operation is $\leq 35K$
Size of reserved opening for installation	730*320 R70

Safety precautions:

In order to avoid harm to users and other personnel and property loss, please use it correctly on the basis of full understanding of the following contents, please strictly abide by it!

1. In case of gas leakage during use, please close the switch knob and gas main valve immediately to maintain ventilation. Do not turn the power switch and ignition, and do not use mobile phones, fixed phones, etc. at the leakage site. In order to avoid ignition of residual gas leakage, resulting in explosion accidents.
2. Gas cookers have been strictly tested for gas leakage performance before leaving the factory. In order to avoid gas leakage, do not disassemble or refit gas cookers.
3. If it is used indoors, please keep the indoor air circulation. Long term indoor use may cause carbon monoxide poisoning.
4. In use or just after the flame-out, there is still residual heat in the stove, pot rack and tray.

Do not touch it by hand. In the case of no one to take care of, do not let children use or close to the heating gas stove to avoid scalding.

5. Do not install gas stoves in bedrooms, bathrooms, basements or places containing flammable, explosive and corrosive materials.

6. When the rubber hose is aged, it should be replaced in time. If the old hose is cracked or the interface is easy to loosen, and there is a place causing air leakage, do not use it. It is suggested that the service life of the hose should not exceed one and a half years.

Environmental impact statement for users

Please dispose of packing materials in an environmentally friendly manner. Please recycle paper materials or recycle paper products. Plastic film and foam polystyrene and other special waste recycling station.

Please do not allow children to play plastic film and foam polystyrene, which may cause asphyxia and other safety accidents.

When the old stove can not be used, it should be scrapped in time. Please dispose it to be unusable before discarding. Old stoves contain useful materials that can be reused. Please assist in proper disposal or recycling and contribute to environmental protection.

Product information picture





Packing List

Please check whether the following products and accessories are complete one by one after unpacking, if they are missing or damaged:

- if it is the responsibility of the company or the seller, please contact the company or the seller.
- if it is the user's responsibility, please contact the seller.
- one pull-type gas stove
- one certificate
- product installation and operation manual
- intake hose

Installation method

1. Before installation, please confirm whether the opening size and reserved size of the warehouse door meet the installation requirements of the purchased product.
2. Pull up the two blue handles on the outermost side of the gas stove (Figure 1), push the slide in the left guide rail along the arrow direction with a flat-head screwdriver (As equipped with anti-extraction protection device,Figure 2), and remove the Angle aluminum on both sides of the stove.
3. Punch several holes on the two Angle aluminum, adjust the installation height of the Angle aluminum, and install the Angle aluminum in the appropriate position in the bin door (Note: the position of the hole on the Angle aluminum should be able to avoid both sides of the gas stove shell)
4. Then install the gas stove on the Angle aluminum to complete the installation.

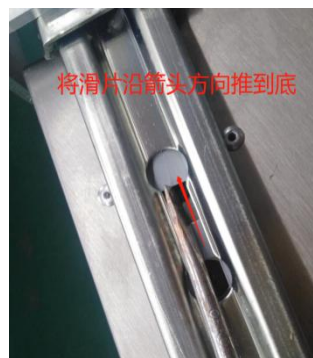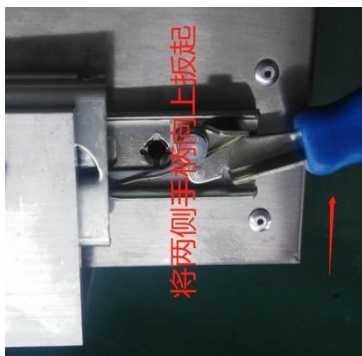

Instructions

■ please do not put the stove under the interference of strong wind when using the stove, which will affect the normal combustion condition of the stove, or even can not work.

■ when cooking food with food oil or animal fat oil, be careful that the oil pan overheats and catches fire. Do not leave food in the pot.

■ this stove is a built-in gas stove, which is suitable for small utensils to make coffee and boil water. It is not recommended to be used for frying, frying and frying.

■ the stove will get hot during use. Pay attention to avoid contacting the heating unit to avoid scalding.

■ in case of combustion due to high oil temperature, please cover the fire source with large area metal objects such as iron pot cover to cut off the air required for combustion, and then turn off the gas switch. Do not extinguish with water to prevent accidents.

■ please turn off the main gas valve on the pipe or cylinder when you are out or leaving after use.

■ there should be no abnormal noise under normal combustion. If there is any abnormal, please contact the seller.

Press and hold the ignition knob on the gas cylinder for 5 seconds, and then turn on the ignition valve. For the first time, because there is residual air in the intake pipe, if the ignition fails, it can be repeated several times. Turn the knob to adjust the flame size.

■ when it is out of use, turn the gas switch knob clockwise to the end, and the flame will be extinguished. Then close the main valve of air source.

Daily inspection and maintenance

Warnings:

1. Before inspection and maintenance, please close the main gas valve and wait for the stove to cool down.

2. Check and maintain the following scope, and never dismantle the safety device or gas pipeline.

3. In case of any abnormality, please contact the seller or our company.

Check:

1. The connection of gas pipe should be reliable without cracks. Once there is air leakage, it should be stopped immediately and replaced in time.

2. No flammable materials should be stacked around the stove.

3. There should be no oil stain and blockage on the gas stove plate, and the connection parts should be firm without looseness.

4. The flame should not be uneven.

Check all interfaces with soapy water regularly to ensure no air leakage.

Maintenance:

1. The glass panel and shell of the stove shall be cleaned regularly with a wet soft cloth dipped with neutral detergent.

2. If the connection parts of the cooker are loose, tighten them with appropriate tools.

Common fault identification and treatment

Fault phenomenon	Cause of failure	processing method
NO FIRE ON	Forget to open the main gas valve	First turn off the gas switch of the stove, open the main gas valve, and then turn on the gas switch of the stove for ignition
	Air is mixed into the trachea	Ignite repeatedly until the air in the trachea is completely discharged
	Ignition head deviates from vent hole	Correct with a screwdriver
	Bending or pressure deviation of hose	Straighten or replace the hose
Gas leakage	The hose joint is not well connected with the hose or other connections	Check the air tightness of the air pipe connection and connect it well

Flame instability	LPG used up	Replacement of liquefied gas cylinders
Uneven glass cover	Deformation and displacement during transportation or transportation	Loosen the hinge screws or adjust the screws on the glass cover

After sale and warranty service

1. Handle with care during transportation to prevent damage to the product. The product should be stored in a ventilated and dry warehouse, and should not be stacked with corrosive materials.

2. The company will provide 12 months (one year) warranty for all products from the date of shipment.

3. Customers shall inspect the products received by the company to ensure that the models and quality of products received meet the requirements of customers.

If the products are damaged, please send them back as soon as possible and contact your customer manager to arrange the return and replacement.

4. During the warranty period, if the product is in normal condition, the warranty card and invoice can be presented. The company provides after-sales service. If the product damage is caused by the following reasons, the company will not be obliged to provide free warranty service:

A. Counterfeiting and imitation of the company's products;

B. Accidental factors or human behavior, such as man-made damage, water, mechanical damage, fall, etc.